



# Button Functionality



KURV 2.0 Voice  
Remote Control Shown

- 1 TV POWER:**  
Powers on or off TV if remote is programmed with a TV infrared code.
- 2 TV INPUT:**  
Changes video input on TV if remote is programmed with a TV infrared code.
- 3 POWER:**  
Switches STB power on or into standby or off mode. Will also control TV power and audio system after remote has been programmed with a TV/Audio Infrared code.
- 4 PAGE (Up or Down):**  
In the GUIDE or MENU screens, scrolls one page up or down.
- 5 MENU:**  
Launches the MAIN MENU within the App with Live Video or last viewed On-Demand program.
- 6 LIVE TV:**  
Tunes to the last content viewed in the App.
- 7 MUTE:**  
Mutes the audio on your audio device(s) (TV, Audio System, or STB).
- 8 VOLUME (Up or Down):**  
Increases or decreases volume levels on your audio device(s).
- 9 CHANNEL (Up or Down):**  
Selects the previous and next available channels. (Hold for rapid advance.) Within MENU or GUIDE acts the same as Page Up/Page Down.

- 10 GOOGLE HOME:**  
Launches AndroidTV main menu including access to Apps.
- 11 LAST:**  
Displays the last 15 items that have been watched.
- 12 BACK / EXIT:**  
Returns to previous menu or state within current App. From live video, this key opens the Main Menu.
- 13 GUIDE:**  
Launches the Channel GUIDE (EPG) within the App.
- 14 ARROWS:**  
Moves to highlight items in respective direction.
- 15 OK / SELECT:**  
*Short Press* - Confirms a selection. When watching video in the App, info on the current video playing appears, including the time shift bar.  
*Long Press* - Invokes the App search menu. This is the same function as the magnifying glass in the Main Menu.
- 16 SHOWS:**  
Launches the SHOWS play list in the App.
- 17 MOVIES:**  
Launches the MOVIES play list in the App.
- 18 SEARCH / VOICE:**  
 Launches text-based Google Assistant search.  Launches voice-based Google Assistant search.
- 19 RECORD:**  
Begin recording selected content in the App.
- 20 REWIND:**  
Fast rewinds VOD, or live TV.
- 21 FAST FORWARD:**  
Fast forwards VOD, or live TV.
- 22 PAUSE / PLAY:**  
Play or Pause toggle of VOD, or live TV.
- 23 0-9:**  
Enters channel numbers in the GUIDE or full screen video.
- 24 SET:**  
Setup the remote to control the TV, and to program an audio device with Infrared (IR) commands.